

FCC ()

15 FCC (

).

-
-
-
-

-
-
-
-

 4	/ 9
 4	 10
 5	MIDI 10
 6	 11
CD- (Aux in) 6	 11
 6	 12
 6	 12
MIDI USB 6	 12
 7	 12
 7	 13
 7	 13
 7	 13
 8	 13
 8	 14
 8	 15
 9	 15
 9	 15
 9	 16
 9	GM 18
 9	MIDI 19

1 (MASTER VOLUME)

2 [START/STOP]

3 3-

 
4 [CLICK] / [CLICK] 2 [CLICK].

5 [MODE] [MODE] PATTERN (), KIT (), VOICE (), CLICK ().

6 [PAGE] [Page] [mode] [page],

[+] [-]

7 [+] [-] [+] [-]

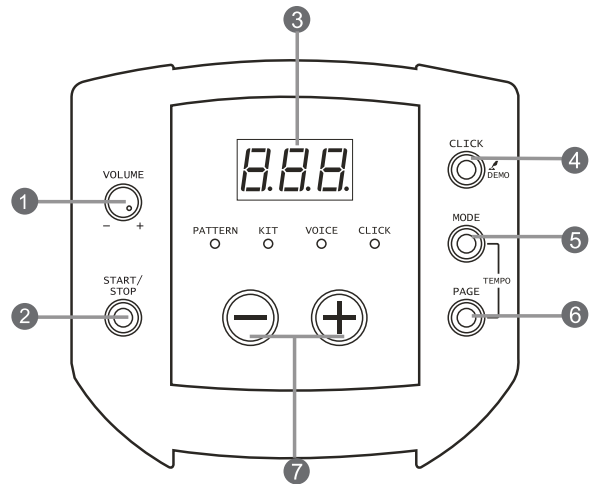

8 (9)

9 POWER

 
10 USB

11 MIDI OUT (MIDI)

12 (R, L/MONO)

13 AUX IN:

14 PHONES

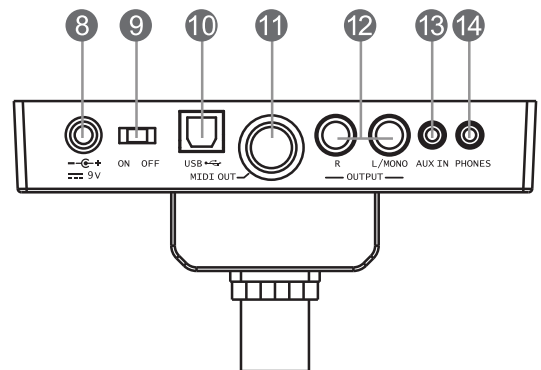





()

1.

 
2.

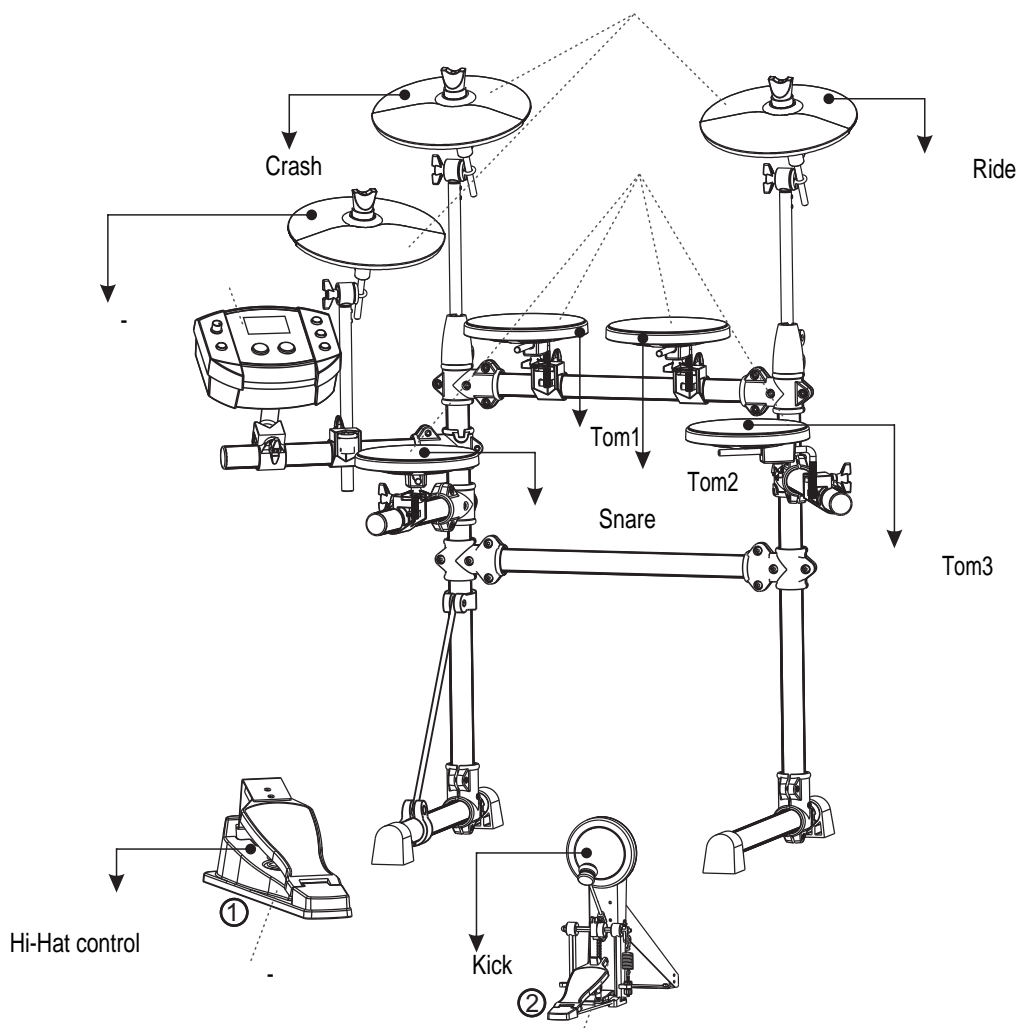

 1. Output L/MONO R, (: L/MONO R. L/MONO.)
2. VOLUME.

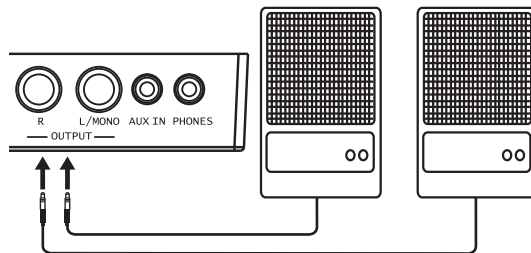


- CD- (Aux in)
1. MP3/CD AUX IN,

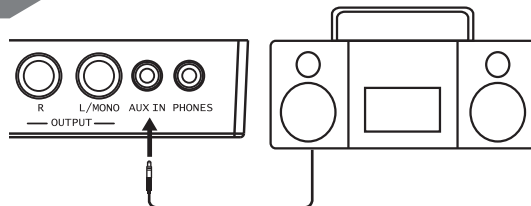 


2. VOLUME.

 - * PHONES,

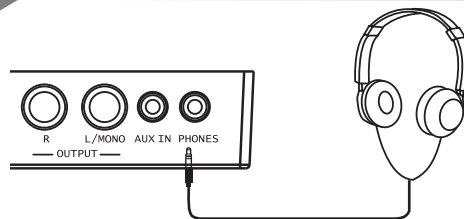

 - 1.
- 2.

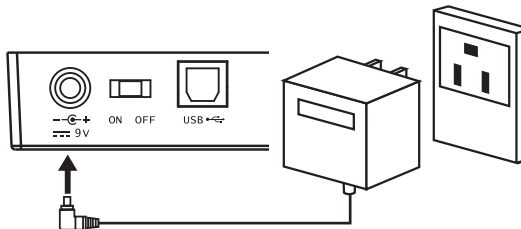

MIDI USB

MIDI ()—

MIDI MIDI

MIDI MIDI OUT:

MIDI MIDI

USB

USB

 
Windows XP/Vista/Win7 MAC OSX

"USB Audio device" (MIDI USB),

: USB

USB MIDI MIDI USB.



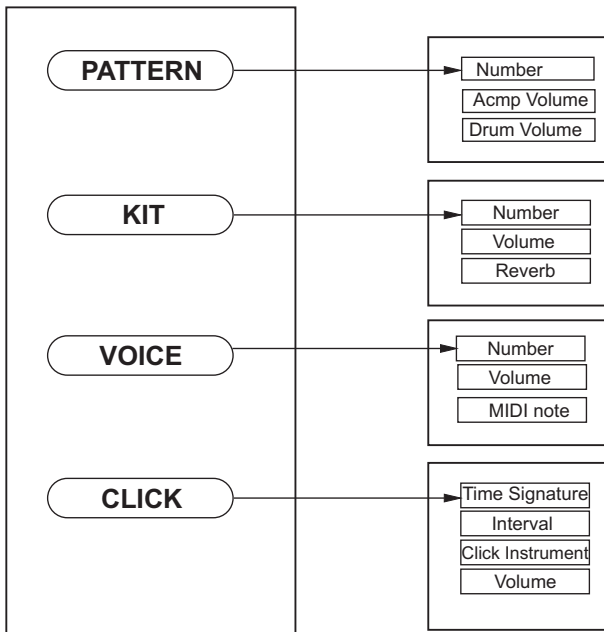


4 :




- PATTERN ()
- DRUM KIT()
- VOICE ()
- CLICK ()

[MODE].

 [Page]
[+] [-]

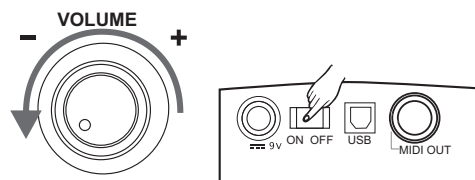


"on"

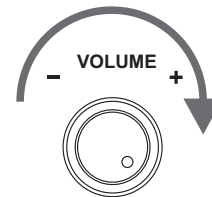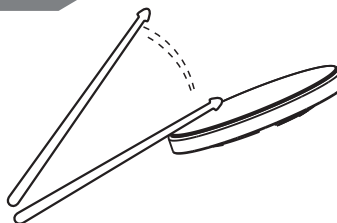   


1. (1-40)
2. (0-32)
3. (0-32)

 
- 001-040 ((Pattern number) -1).
1. [MODE] (001).
 2. [+] [-] 001 040.

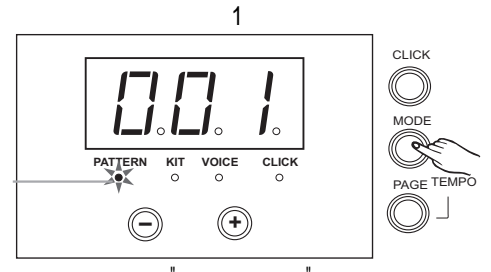

 - (0-032)
1. [MODE] (A22).
 2. [PAGE]
 3. [+] [-] 0 32.

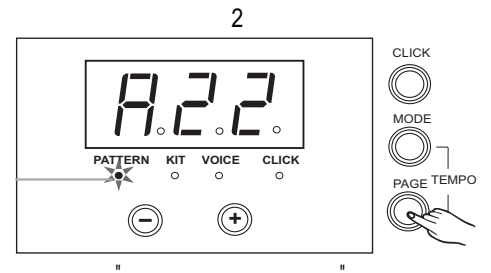


 - (0-032)
1. [MODE] (d22).
 2. [PAGE]
 3. [+] [-] 0 32.

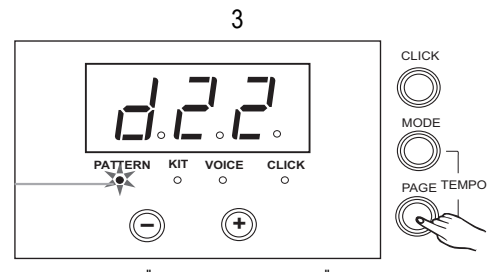


1. (001-010, 3 : 1)
2. (0-32)
3. / (on/off, "on").

 
- 001-010 (
1. -1). [MODE] (001).
 2. [+] [-] 001 010.

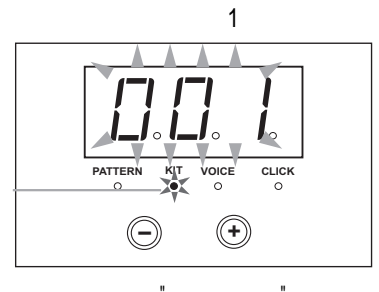

 
- (0-32).
1. [MODE] (L30).
 2. [PAGE]
 3. [+] [-] 0 32.

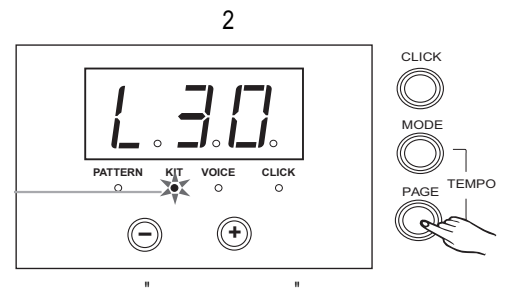

 1. [MODE] kit reverb (
2. [PAGE] [+]. [-].

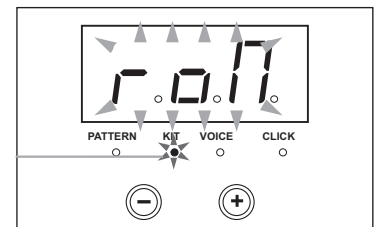


3

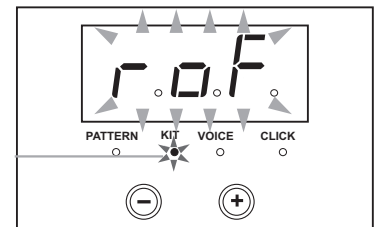 


1. (1-108)
2. (0-32)
3. MIDI (0-99)

(1-108).

 1. [MODE],
VOICE,
2. [+], [-] ()
)
001 108.
:

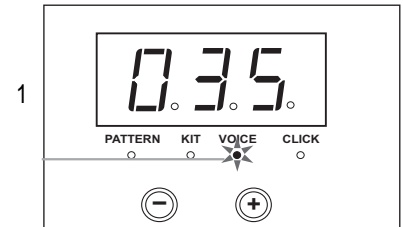


(1-4),
: H-1

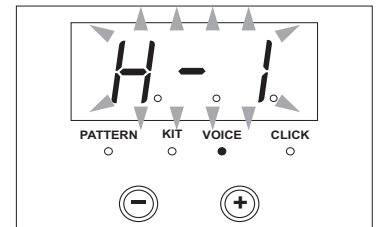 

(0-32).

1. [MODE]
2. [Page]
(voice volume),
3. [+], [-] ()
)
0 32.

 
2

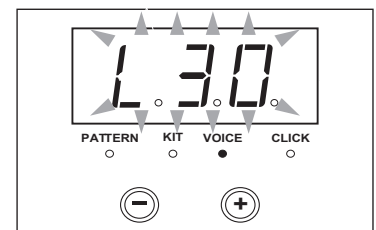

MIDI

MIDI (0-99).

 1. [MODE]
2. [PAGE] MIDI note, (n48).
3. [+] [-] (0 99).

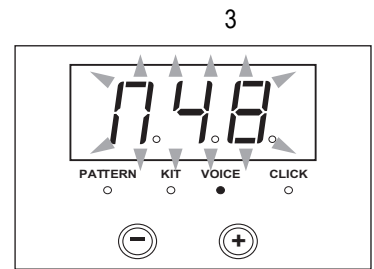


MIDI :

NO.		
1	CRASH1	49
2	TOM 1	48
3	TOM 2	45
4	TOM 3	43
5	RIDE	51
6	KICK	36
7	SNARE	38
8	HIHAT CLOSE	42
9	HIHAT OPEN	46
10	HIHAT PEDAL	44

30-280

 
1. [mode] [page],
2. [+] [-]

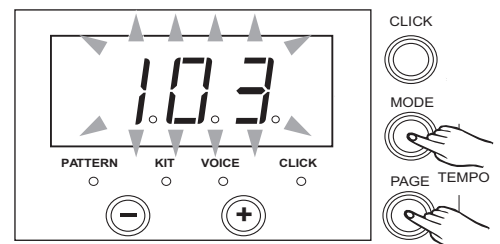

1. (1/4-7/4, 3/8, 6/8).
2. (1/4, 1/8, 1/12, 1/16, 1/24, 1/4).
3. (1-5, 1).
4. (0-32)


(1/4-7/4, 3/8, 6/8).

 1. [MODE]
 2. [PAGE]
 3. [4-4]
- [+] [-] 1/4-7/4 3/8 6/8.

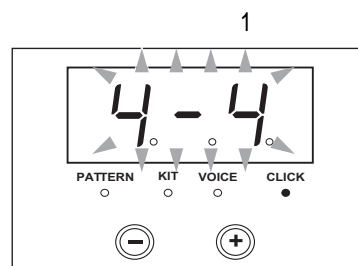


(1/4, 1/8, 1/12, 1/16, 1/24, 1/4).

 1. [MODE]
 2. [PAGE]
 3. [-4]
- [+] [-] -4 -24.

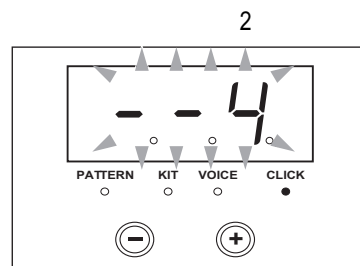


1-5 (-1).

 1. [MODE]
 2. [PAGE]
 3. [CL1]
- [+] [-] CL1 CL5.

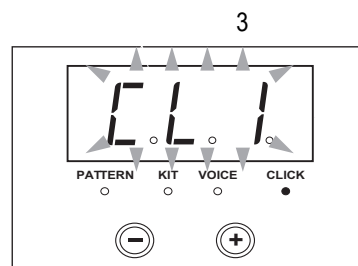

(0-32).

 1. [MODE]
 2. [PAGE]
 3. [L24]
- [+] [-] 0 32.

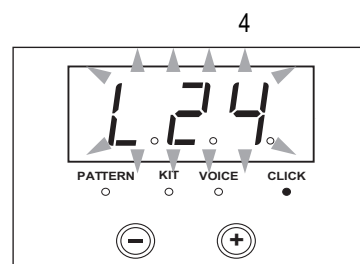


[+] [-].

MIDI .

1. [CLICK] 2 ;
2. [START/STOP]

 "dE".

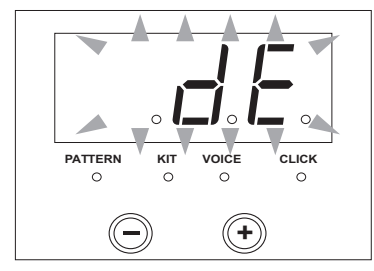

1. [START/STOP]
2. [START/STOP]

1. [CLICK]
2. [CLICK]

4 , 3 ,
1 -
1

10

108

40

-
PHONES
AUXIN
OUTPUT (R & L/MONO)
MIDI OUT
USB
ON/OFF

9 .

MIDI OUT, POWER SWITCH, USB,
PHONES, START/STOP, PATTERN,
KIT, VOICE, CLICK, MODE, PAGE,
DEMO, TEMPO, VOLUME, + / -

No. Name

001	Acoustic
002	Standard 1
003	Rock
004	Standard 2
005	Funk
006	Jazz
007	Brush
008	Electronic
009	808
010	House

No. Name

KICK	
001	Standard Kick 1
002	Standard Kick 2
003	Room Kick
004	Rock Kick 1
005	Rock Kick 2
006	Acoustic Kick
007	HipHop Kick
008	Funk Kick
009	Jazz Kick 1
010	Jazz Kick 2
011	Electronic Kick
012	808 Kick
013	House Kick 1
014	House Kick 2
SNARE	
015	Classic Snare 1
016	Classic Snare Rim 1
017	Classic Snare 2
018	Classic Snare Rim 2
019	Room Snare 1
020	Room Snare 2
021	Acoustic Snare

No. Name

022	Acoustic Snare Rim
023	Funk Band Snare
024	Funk Band Snare Rim
025	Camco Snare
026	Camco Snare Rim
027	Brush Snare
028	Brush Snare Rim
029	Electronic Snare 1
030	Electronic Snare 2
031	808 Snare
032	House Snare 1
033	House Snare 2
TOM	
034	Classic Tom 1
035	Classic Tom 2
036	Classic Tom 3
037	Classic Tom 4
038	Classic Tom 5
039	Classic Tom 6
040	Camco Tom 1
041	Camco Tom 2
042	Camco Tom 3

No. Name

043	Camco Tom 4
044	Camco Tom 5
045	Camco Tom 6
046	808 Tom 1
047	808 Tom 2
048	808 Tom 3
049	808 Tom 4
050	808 Tom 5
051	808 Tom 6
052	Electronic Tom 1
053	Electronic Tom 2
054	Electronic Tom 3
055	Electronic Tom 4
056	Electronic Tom 5
057	Electronic Tom 6
RIDE	
058	Classic Ride
059	Classic Ride Bell
060	Rock Ride
061	808 Ride
CRASH	
062	Standard Crash 1

No. Name

063	Standard Crash 2
064	Rock Crash
065	Splash 1
066	Splash 2
067	Brush Crash
068	808 Crash
HI-HAT	
069	Standard Hi-hat Open
070	Jazz Hi-hat Open
071	Electronic Hi-hat Open
072	808 Hi-hat Open
073	Standard Hi-hat Close
074	Jazz Hi-hat Close
075	Electronic Hi-hat Close
076	808 Hi-hat Close
077	Standard Hi-hat Pad
078	Jazz Hi-hat Pad
079	Electronic Hi-hat Pad
080	808 Hi-hat Pad
PERCUSSTION	
081	Bongo High

No. Name

082	Bongo Low
083	Mute Conga Hi-hat
084	Open Conga Hi-hat
085	Conga Low
086	Timbale High
087	Timale Low
088	Agogo High
089	Agogo Low
090	Cabasa
091	Maracas
092	Short Whistle
093	Long Whistle
094	Short Guiro
095	Long Guiro
096	Claves
097	Wood Block High
098	Wood Block Low
099	Mute Cuica
100	Open Cuica
101	Mute Triangle
102	Open Triangle
103	Shaker
104	Jingle Bell
105	Belltree
106	Castanets
107	Mute Surdo
108	Open Surdo

No. Name

001	Fusion 1	103	1
002	Electronic & Funk	116	9
003	Modern Pop	136	1
004	HipHop	110	9
005	Latin Jazz 1	130	7
006	Funk 1	120	5
007	Big Band 1	170	6
008	Funk 2	112	1
009	Pop Funk 1	112	1
010	Fusion 2	112	1
011	Funk 3	120	5
012	Fusion 3	108	1
013	Fusion 4	116	1
014	Pop Funk 2	106	5
015	R&B	86	9
016	Drum & Bass 1	168	9
017	Break Beat	108	5
018	Dance	130	9
019	Drum & Bass 2	170	1
020	Latin Dance	126	5

Tempo Kit

No. Name

021	Swing	172	6
022	Latin Jazz 2	126	7
023	Big Band 2	152	6
024	3/4 Jazz	120	7
025	Jazz	150	7
026	6/8 Ballad	96	3
027	Pop Ballad	80	3
028	Pop Bossa	120	2
029	16Beat Pop	120	5
030	Pop Shuffle	86	5
031	Samba	236	1
032	Mambo	126	5
033	Latin Rock	136	1
034	Latin Pop	126	5
035	Guitar Bossa	84	5
036	Country Blues	128	3
037	Rock	100	1
038	Reggae	78	1
039	60's Rock	120	2
040	Blues	96	2
Demo Funk		100	1

Tempo Kit

PIANO

- 1 Acoustic Grand Piano
- 2 Bright Acoustic Piano
- 3 Electric Grand Piano
- 4 Honky-Tonk Piano
- 5 E.Piano 1
- 6 E.Piano 2
- 7 Harpsichord
- 8 Clavi

MALLET

- 9 Celesta
- 10 Glockenspiel
- 11 Music Box
- 12 Vibraphone
- 13 Marimba
- 14 Xylophone
- 15 Tubular Bells
- 16 Dulcimer

ORGAN

- 17 Drawbar Organ
- 18 Percussive Organ
- 19 Rock Organ
- 20 Church Organ
- 21 Reed Organ
- 22 Accordion
- 23 Harmonica
- 24 Tango Accordion

GUITAR

- 25 Nylon Guitar
- 26 Steel Guitar
- 27 Jazz Guitar
- 28 Clean Guitar
- 29 Muted Guitar
- 30 Overdriven Guitar
- 31 Distortion Guitar
- 32 Guitar Harmonics

BASS

- 33 Acoustic Bass
- 34 Finger Bass
- 35 Pick Bass
- 36 Fretless Bass
- 37 Slap Bass 1
- 38 Slap Bass 2
- 39 Synth Bass 1
- 40 Synth Bass 2

STRINGS

- 41 Violin
- 42 Viola
- 43 Cello
- 44 Contrabass
- 45 Tremolo Strings
- 46 Pizzicato Strings
- 47 Orchestral Harp
- 48 Timpani

STRINGS ENSEMBLE

- 49 Strings Ensemble 1
- 50 Strings Ensemble 2
- 51 Synth Strings 1
- 52 Synth Strings 2
- 53 Choir Aahs
- 54 Voice Oohs
- 55 Synth Voice
- 56 Orchestra Hit

BRASS

- 57 Trumpet
- 58 Trombone
- 59 Tuba
- 60 Muted Trumpet
- 61 French Horn
- 62 Brass Section
- 63 Synth Brass 1
- 64 Synth Brass 2

REED

- 65 Soprano Sax
- 66 Alto Sax
- 67 Tenor Sax
- 68 Baritone Sax
- 69 Oboe
- 70 English Horn
- 71 Bassoon
- 72 Clarinet

PIPE

- 73 Piccolo
- 74 Flute
- 75 Recorder
- 76 Pan Flute
- 77 Blown Bottle
- 78 Shakuhachi
- 79 Whistle
- 80 Ocarina

LEAD

- 81 Lead1 (square)
- 82 Lead2 (sawtooth)
- 83 Lead3 (calliope)
- 84 Lead4 (chiff)
- 85 Lead5 (charang)
- 86 Lead6 (voice)
- 87 Lead7 (fifths)
- 88 Lead8 (bass & Lead)

PAD

- 89 Pad1 (newage)
- 90 Pad2 (warm)
- 91 Pad3 (Polysynth)
- 92 Pad4 (choir)
- 93 Pad5 (bowed)
- 94 Pad6(metallic)
- 95 Pad7 (halo)
- 96 Pad8 (sweep)

EFFECTS

- 97 FX1 (rain)
- 98 FX2 (soundtrack)
- 99 FX3 (crystal)
- 100 FX4 (atmosphere)
- 101 FX5 (brightness)
- 102 FX6 (goblins)
- 103 FX7 (echoes)
- 104 FX8 (sci-fi)

ETHNIC

- 105 Sitar
- 106 Banjo
- 107 Shamisen
- 108 Koto
- 109 Kalimba
- 110 Bagpipe
- 111 Fiddle
- 112 Shanai

PERCUSSIVE

- 113 Tinkle Bell
- 114 Agogo
- 115 Steel Drums
- 116 Wood Block
- 117 Taiko Drum
- 118 Melodic Tom
- 119 Synth Drum
- 120 Reverse Cymbal

SOUND EFFECTS

- 121 Guitar Fret Noise
- 122 Breath Noise
- 123 Seashore
- 124 Bird Tweet
- 125 Telephone Ring
- 126 Helicopter
- 127 Applause
- 128 Gunshot

NET NO.	Standard 1 (bank 0)	Standard 2 (bank 4)	Room (bank 8)	Rock (bank 16)	Funk (bank 17)
27-D#1	High Q	<-	<-	<-	<-
28-E1	Slap	<-	<-	<-	<-
29-F1	Scratch Push	<-	<-	<-	<-
30-F#1	Scratch Pull	<-	<-	<-	<-
31-G1	Sticks	<-	<-	<-	<-
32-G#1	Square Click	<-	<-	<-	<-
33-A1	Metronome Click	<-	<-	<-	<-
34-A#1	Metronome Bell	<-	<-	<-	<-
35-B1	Acoustic Bass Drum	<-	Room Bass Drum 1	Rock Bass Drum 1	Funk Bass Drum 1
36-C2	Standard 1 Bass Drum	Standard 2 Bass Drum	Room Bass Drum 2	Rock Bass Drum 2	Funk Bass Drum 2
37-C#2	Side Stick	<-	<-	<-	<-
38-D2	Standard 1 Snare	Standard 2 Snare	Room Snare	Rock Snare	Funk Snare
39-D#2	Hand Clap	<-	<-	<-	<-
40-E2	Standard 1 Snare Rim	Standard 2 Snare Rim	Room Snare Rim	Rock Snare Rim	Funk Snare Rim
41-F2	Standard 1 Tom 6	Standard 2 Tom 6	Room Tom 6	Rock Tom 6	Funk Tom 6
42-F#2	Standard 1 Hi-hat Close	Standard 2 Hi-hat Close	Room Hi-hat Close	Rock Hi-hat Close	Funk Hi-hat Close
43-G2	Standard 1 Tom 5	Standard 2 Tom 5	Room Tom 5	Rock Tom 5	Funk Tom 5
44-G#2	Standard 1 Hi-hat Pedal	Standard 2 Hi-hat Pedal	Room Hi-hat Pedal	Rock Hi-hat Pedal	Funk Hi-hat Pedal
45-A2	Standard 1 Tom 4	Standard 2 Tom 4	Room Tom 4	Rock Tom 4	Funk Tom 4
46-A#2	Standard 1 Hi-hat Open	Standard 2 Hi-hat Open	Room Hi-hat Open	Rock Hi-hat Open	Funk Hi-hat Open
47-B2	Standard 1 Tom 3	Standard 2 Tom 3	Room Tom 3	Rock Tom 3	Funk Tom 3
48-C3	Standard 1 Tom 2	Standard 2 Tom 2	Room Tom 2	Rock Tom 2	Funk Tom 2
49-C#3	Standard 1 Crash 1	Standard 2 Crash 1	Room Crash 1	Rock Crash 1	Funk Crash 1
50-D3	Standard 1 Tom 1	Standard 2 Tom 1	Room Tom 1	Rock Tom 1	Funk Tom 1
51-D#3	Standard 1 Ride	Standard 2 Ride	Room Ride	Rock Ride	Funk Ride
52-E3	Chinese Cymbal 1	<-	<-	<-	<-
53-F3	Ride Bell	<-	Room Ride Bell	Rock Ride Bell	<-
54-F#3	Tambourine	<-	<-	<-	<-
55-G3	Splash Cymbal	<-	Room Splash Cymbal	Rock Splash Cymbal	<-
56-G#3	Standard 1 Cowbell	Standard 2 Cowbell	Room Cowbell	Rock Cowbell	<-
57-A3	Standard 1 Crash 2	Standard 2 Crash 2	Room Crash 2	Rock Crash 2	Funk Crash 2
58-A#3	Vibra-slap	<-	<-	<-	<-
59-B3	Ride Cymbal	<-	<-	<-	<-
60-C4	Hi Bongo	<-	<-	<-	<-
61-C#4	Low Bongo	<-	<-	<-	<-
62-D4	Mute Hi Conga	<-	<-	<-	<-
63-D#4	Open Hi Conga	<-	<-	<-	<-
64-E4	Low Conga	<-	<-	<-	<-
65-F4	High Timbale	<-	<-	<-	<-
66-F#4	Low Timbale	<-	<-	<-	<-
67-G4	High Agogo	<-	<-	<-	<-
68-G#4	Low Agogo	<-	<-	<-	<-
69-A4	Cabasa	<-	<-	<-	<-
70-A#4	Maracas	<-	<-	<-	<-
71-B4	Short Whistle	<-	<-	<-	<-
72-C5	Long Whistle	<-	<-	<-	<-
73-C#5	Short Guiro	<-	<-	<-	<-
74-D5	Long Guiro	<-	<-	<-	<-
75-D#5	Claves	<-	<-	<-	<-
76-E5	Hi Wood Block	<-	<-	<-	<-
77-F5	Low Wood Block	<-	<-	<-	<-
78-F#5	Mute Cuica	<-	<-	<-	<-
79-G5	Open Cuica	<-	<-	<-	<-
80-G#5	Mute Triangle	<-	<-	<-	<-
81-A5	Open Triangle	<-	<-	<-	<-
82-A#5	Shaker	<-	<-	<-	<-
83-B5	Jingle Bell	<-	<-	<-	<-
84-C6	Bell Tree	<-	<-	<-	<-
85-C#6	Castanets	<-	<-	<-	<-
86-D6	Mute Surdo	<-	<-	<-	<-
87-D#6	Open Surdo	<-	<-	<-	<-

NET NO.	Electronic (bank 24)	808 (bank 25)	House (bank 28)	Jazz (bank 32)	Brush (bank 40)
27-D#1	<-	<-	<-	<-	<-
28-E1	<-	<-	<-	<-	<-
29-F1	<-	<-	<-	<-	<-
30-F#1	<-	<-	<-	<-	<-
31-G1	<-	<-	<-	<-	<-
32-G#1	<-	<-	<-	<-	<-
33-A1	<-	<-	<-	<-	<-
34-A#1	<-	<-	<-	<-	<-
35-B1	Electronic Bass Drum 1	808 Bass Drum 1	House Bass Drum 1	Jazz Bass Drum 1	Brush Bass Drum 1
36-C2	Electronic Bass Drum 2	808 Bass Drum 2	House Bass Drum 2	Jazz Bass Drum 2	Brush Bass Drum 2
37-C#2	<-	<-	<-	<-	<-
38-D2	Electronic Snare	808 Snare	House Snare	Jazz Snare	Brush Snare
39-D#2	<-	<-	House Hand Clap	<-	<-
40-E2	Electronic Snare Rim	808 Snare Rim	House Snare Rim	Jazz Snare Rim	Brush Snare Rim
41-F2	Electronic Tom 6	808 Tom 6	House Tom 6	Jazz Tom 6	Brush Tom 6
42-F#2	Electronic Hi-hat Close	808 Hi-hat Close	House Hi-hat Close	Jazz Hi-hat Close	<-
43-G2	Electronic Tom 5	808 Tom 5	House Tom 5	Jazz Tom 5	Brush Tom 5
44-G#2	Electronic Hi-hat Pedal	808 Hi-hat Pedal	House Hi-hat Pedal	Jazz Hi-hat Pedal	<-
45-A2	Electronic Tom 4	808 Tom 4	House Tom 4	Jazz Tom 4	Brush Tom 4
46-A#2	Electronic Hi-hat Open	808 Hi-hat Open	House Hi-hat Open	Jazz Hi-hat Open	<-
47-B2	Electronic Tom 3	808 Tom 3	House Tom 3	Jazz Tom 3	Brush Tom 3
48-C3	Electronic Tom 2	808 Tom 2	House Tom 2	Jazz Tom 2	Brush Tom 2
49-C#3	<-	808 Crash 1	<-	<-	Brush Crash 1
50-D3	Electronic Tom 1	808 Tom 1	House Tom 1	Jazz Tom 1	Brush Tom 1
51-D#3	<-	<-	<-	Jazz Ride	Brush Ride
52-E3	<-	<-	<-	<-	<-
53-F3	<-	<-	<-	<-	<-
54-F#3	<-	<-	<-	<-	<-
55-G3	<-	<-	<-	<-	<-
56-G#3	<-	<-	<-	<-	<-
57-A3	<-	808 Crash 2	<-	ChineseCymbal 2	Brush Crash 2
58-A#3	<-	<-	<-	<-	<-
59-B3	<-	<-	<-	<-	<-
60-C4	<-	<-	<-	<-	<-
61-C#4	<-	<-	<-	<-	<-
62-D4	<-	808 Mute Hi Conga	<-	<-	<-
63-D#4	<-	808 Open Hi Conga	<-	<-	<-
64-E4	<-	808 Low Conga	<-	<-	<-
65-F4	<-	<-	<-	<-	<-
66-F#4	<-	<-	<-	<-	<-
67-G4	<-	<-	<-	<-	<-
68-G#4	<-	<-	<-	<-	<-
69-A4	<-	<-	<-	<-	<-
70-A#4	<-	808 Maracas	<-	<-	<-
71-B4	<-	<-	<-	<-	<-
72-C5	<-	<-	<-	<-	<-
73-C#5	<-	<-	<-	<-	<-
74-D5	<-	<-	<-	<-	<-
75-D#5	<-	808 Claves	<-	<-	<-
76-E5	<-	<-	<-	<-	<-
77-F5	<-	<-	<-	<-	<-
78-F#5	<-	<-	<-	<-	<-
79-G5	<-	<-	<-	<-	<-
80-G#5	<-	<-	<-	<-	<-
81-A5	<-	<-	<-	<-	<-
82-A#5	<-	<-	<-	<-	<-
83-B5	<-	<-	<-	<-	<-
84-C6	<-	<-	<-	<-	<-
85-C#6	<-	<-	<-	<-	<-
86-D6	<-	<-	<-	<-	<-
87-D#6	<-	<-	<-	<-	<-

MIDI

	Function...	Transmitted	Recognized	Remarks
Basic	Default	10 ch	1-16	
Channel	Changed	X	X	
	Default	X	X	
Mode	Messages	X	X	
	Altered	*****	*****	
Note		0-127	0-127	
Number:	True voice	*****	0-127	
Velocity	Note on	O 99H, V=1-127	0-127	
	Note off	O (9 9H. V=0)	0-127	
After	Key's	X	X	
Touch	Channel's	X	X	
Pitch Bend		X	O	
Control	0	X	O	Bank Select
Change	1	X	O	Modulation
	5	X	O	Portamento Time
	6	X	O	Data Entry
	7	X	O	Volume
	10	X	O	Pan
	11	X	O	Expression
	64	X	O	Sustain Pedal
	65	X	O	Portamento ON/OFF
	66	X	O	Sostenuto Pedal
	67	X	O	Soft Pedal
	80	X	O	Reverb Program
	81	X	O	Chorus Program
	91	X	O	Reverb Level
	93	X	O	Chorus Level
	120	X	O	All Sound OFF
	121	X	O	Reset All Controller
	123	X	O	All Notes OFF
Program	Change	X	O	
System	Exclusive	X	O	
System	: Song Position	X	X	
Common	: Song Select	X	X	
	: Tune	X	X	
System	: Clock	O	X	START \ STOP
Real Time	: Commands	O	X	
Aux	: Local ON/OFF	X	X	
	: All Notes OFF	X	X	
Messages	: Active Sense	O	X	
	: Reset	X	X	

O : YES

X : NO

DD402D-G12