

Stagg®



HEADBANGER SPIN

SLI-HBSPIN

- 1.
- 2.
- 3.
- 4.
- 5.
- 6.
- 7.
- 8.

DMX

- 1.

C

HeadBanger Spin 1

1
1
1

- 2.

3.



50

40C.

5.

DMX

100 240

50-60

Stagg Commandor 10,

DMX (110)

DMX (110)

DMX

20


220 , 16) ,

10

110 , 16

DMX-

		1
		2
/		3

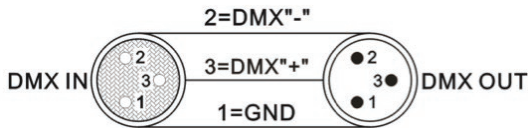

6.

- : 2 x 4 x 10

- : 2*3000 1

- : 25

- : DMX-512 (15 21), master/slave,

- : (540), ()

- : (8), RGBW ,

- : 4

- :

- : ()

- : 3-pin XLR (), 3-pin DMX (), 3-pin DMX () - : 2

- :

- : 100

- : 17 x 24,5 x 15

- : 2,4

7.

HeadBanger Spin

: DMX—512,

	DMX
ADDR	A001 A512 BCH
CHND	1SCH 21CH
SLMD	SOUN SL1 SL2 AUTO
SHND	SH0 SH1 SH2 SH3
SENS	0 99
BLND	SOUN HLOD BLAC AUTO
LED	OFF ON
DISP	NO YES
RPAN	NO YES
RTIL	NO YES
REST	YES

DMX

Menu

DMX (Addr)

Enter

DMX (1-512)

Enter

Menu

Menu

(CHA)

Enter

15 (15Ch) 21

(21Ch) - Enter

Menu

15

	DMX	
1 (Pan)	0-255	0-540
2 (Tilt)	0-255	
3 /	0-255	
4 (Tilt)	0-255	
5	0-255	
6	0-3	
	4-7	
	8-215	
	216-255	
7	0-255	
8	0-255	
9	0-255	
10	0-255	
11 X-Y	0-255	
12 X-Y	0-255	
13	0-255	
14	0-255	
15	245-250	

		DMX	
1	(Pan)	0-255	0-360
2	(PAN) 16	0-255	16
3	(Tilt)	0-255	
4	(Tilt) 16	0-255	16
5	/	0-255	
6	(Tilt)	0-255	
7		0-255	
8		0-3	
		4-7	
		8-215	
		216-255	
9		0-255	
10		0-255	
11		0-255	
12		0-255	
13	1	0-255	
14	1	0-255	
15	1	0-255	
16	1	0-255	
17	X-Y	0-255	
18	X-Y	0-255	
19		0-255	
20		0-255	
21		245-250	

Master () slave ()
 Menu Master (MaMd) Slave (SLMd)
 Enter (Soun), 1 (SU)
 (Auto) - Enter Menu
 " " () ()
 " 1"
 " "
 SL2 (2)
 Menu (SHmd) Enter 0 (SHO), 1 (SH1),
 2 (SH2) 3 (SH3) - Enter Menu
 Menu (SEnS)
 Enter (0-99) Enter
 Menu
 Enter Menu (bLmd)
 (Soun), DMX
 (HLod) (bLAC)
 (Auto)
 Menu (LEd)
 Enter (on) - (off) - Enter
 (off), (on). Menu

Menu (DISP) Enter
(no), Enter (yes), Menu

Menu (rPAN) Enter
(n) - Enter (yes) - ;

Menu

Menu (rTIL) Enter
(n) - Enter (yes) - ;
Menu

Menu (rEst) Enter
Enter

8.
1. CE EMC (2004/108/CE), CE (93/68/EEC)
(2006/95/EC).
2. « » WEEE
() (2002/96/EC).
3. «RoHS compliant»
(2002/95EC)

Stagg®

