

Stagg®



HEADBANGER MINI 8

4 RGBW

SLI-MHW HB8

10

HeadBanger Mini 8.

- 1.
- 2.
- 3.
- 4.
- 5.
- 6.
- 7.
- 8.
- 9.

DMX

- 1.

:
HeadBanger Mini 8 1 .
1 .
1 .
1 .

- 2.

3.



50

40C.

5.

DMX

100 240

50-60

Stagg Commandor 10,

DMX (110)

DMX (110)

DMX

20

220 , 16) ,

10

110 , 16

DMX-

		1
		2
/		3



6.

HeadBanger mini 8 4 RGBW

10

- : 4 x 10 . RGBW

- : 3000 1 .

- : 25

- : DMX-512 (9 12) , , , .

- : (540) , (270 .)

- : , , (8) , RGBW ,

- : 4

- :

- : ()

- : 3-pin DMX () , 3-pin DMX ()

- :

- :

- : 50


- : 17,5 x 13,5 x 14,5

- : 1,7

7.

HeadBanger Mini 8

: DMX—512,

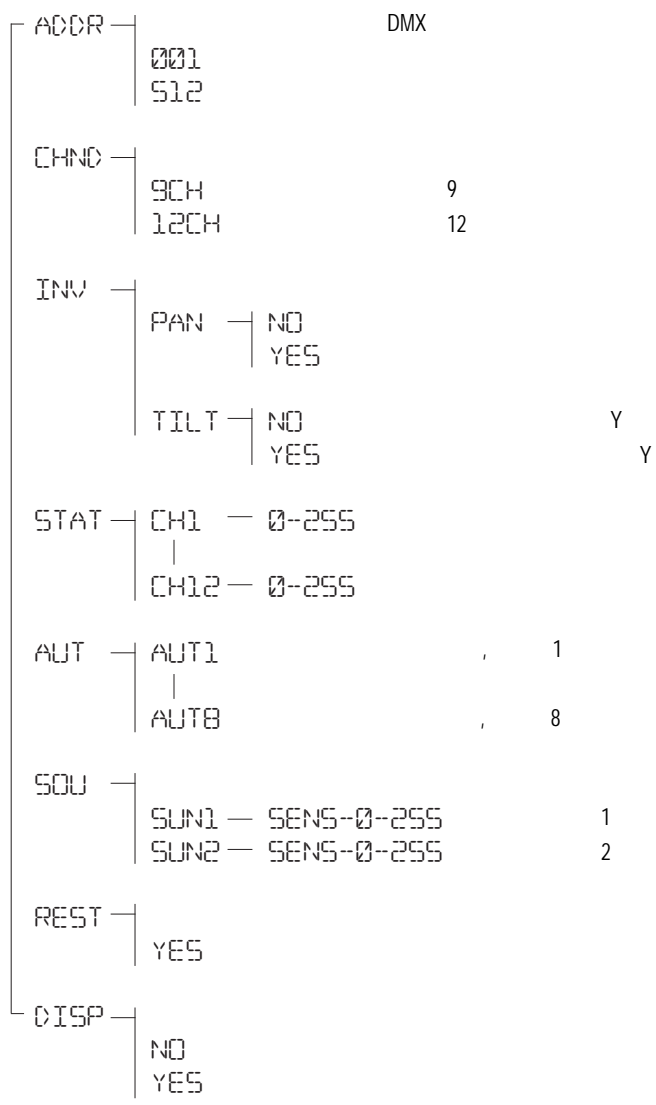

8.
DMX

Menu DMX (Addr) Enter
DMX (1-512)
Enter Menu
Menu (CHA) Enter
9 (9Ch) 12 (12Ch) - Enter
Menu

9

1	0-255	(PAN) 0-540		
2	0-255	(Tilt) 0-220		
3	0-255	(Dimmer) 0-100%		
4	0-255	(Red) 0-100%		
5	0-255	(Green) 0-100%		
6	0-255	(Blue) 0-100%		
7	0-255	(White) 0-100%		
8	0-255	()		
9	0-255			
	0-5			
	6-15	100% / +/ 0%		
	16-25	-/ 100% / 0%		
	26-35	0% / 100% / +		
	36-45	0% / -/ 100%		
	46-55	+/ 0% / 100%		
	56-65	100% / 0% / -		
	66-75	100% / +/ +		
	76-85	-/ -/ 100%		
	86-95	100% / 100% / 100% / 100%		
	96-110	1 ()		
	111-125	2 ()		
	126-140	3 ()		
	141-155	4 ()		
	156-170	5 ()		
	171-185	6 ()		
	186-200	7 ()		
	201-215	8 ()		
	216-230	1 ()		
231-245	2 ()			
246-254				
255	5			

1	0-255	(PAN) 0-540			
2	0-255	(PAN) 16			
3	0-255	(Tilt) 0-220			
4	0-255	(Tilt) 16			
5	0-255	()			
6	0-255	(Dimmer) 0-100%			
7	0-255	(Red) 0-100%			
8	0-255	(Green) 0-100%			
9	0-255	(Blue) 0-100%			
10	0-255	(White) 0-100%			
11	0-255	()			
12	16-25	- /	100% /	0%	
	0-5				
	6-15	100% /	+ /	0%	
	16-25	- /	100% /	0%	
	26-35	0% /	100% /	+	
	36-45	0% /	- /	100%	
	46-55	+ /	0% /	100%	
	56-65	100% /	0% /	-	
	66-75	100% /	+ /	+	
	76-85	- /	- /	100%	
	86-95	100% /	100% /	100% /	100%
	96-110	1 ()		
	111-125	2 ()		
	126-140	3 ()		
	141-155	4 ()		
	156-170	5 ()		
	171-185	6 ()		
	186-200	7 ()		
	201-215	8 ()		
	216-230	1 ()		
	231-245	2 ()		
	246-254				
255	5				

Menu (INV) Enter
,
Enter X (PAN)
Enter X (no) X (YES),
Menu
,
Enter Y (TILT)
Enter Y (no) Y (YES),
Menu

Menu (STA) Enter
(1-12) Enter
(0-255).
Enter Menu
()

Menu (AUT)
Enter
(Show): Show 0 (SH0), Show1 (SH1), Show2 (SH2)..... Show8 (SH8),
Enter Menu

Menu (Sou) Enter
1 (SUN1) 2 (SUN2) -
Enter
(SENS)
Enter. (1-225)
Enter Menu

Menu (rest) Enter
Enter YES

Menu (dISP) Enter
dISP () dsIP (), Enter
Menu

- 9.
1. CE
EMC (2004/108/CE), CE (93/68/EEC)
(2006/95/EC).
 2. « »
() (2002/96/EC). WEEE
 3. «RoHS compliant»
(2002/95EC)

Stagg®

